

## *To accompany Australian Notice to Mariners 1370/2009*

### PORT PHILLIP HEADS ENTRANCE AND SOUTH CHANNEL

Vessels planning to transit Port Phillip Heads must refer to Harbour Master's Directions and comply with general operating requirements in regard to under keel clearance. Additional allowance should be considered to compensate for vertical wave motion in prevailing swell conditions. For more information refer to Port of Melbourne Corporation "Operations Handbook" at [www.portofmelbourne.com](http://www.portofmelbourne.com) and Admiralty Sailing Directions NP14. Information on height of tide and swell can be obtained from Lonsdale VTS on VHF Ch 12.

*Note for chart Aus 158.*